



INSTALLATION, OPERATION & STRAP REPLACEMENT

GO2 OXYGEN CONTAINER HOLDER
FE201122 & FE201207
AND
GO2 TWIN OXYGEN CONTAINER HOLDER
FE201122-2 & FE201207-2



INSTALLATION AND OPERATION INSTRUCTIONS

INSTALLING THE GO2

1. Ensure the GO2 knob is in the unlocked position and pulled upwards. (The red locking indicator will show.) See Figure 1A.
2. Insert the GO2 into the floor track on a slight angle. After the plunger has dropped into the floor track, lock the GO2 by tightening the knob.
3. Ensure the red locking indicator is not visible and that the GO2 is secure before use. See Figure 1B.



Figures 1A & 1B.

Locking knob indicator visible and not visible.

USING THE GO2 OR GO2 TWIN

1. Position the oxygen cylinder or cylinders onto the GO2 bottom holder.
2. To adjust the height of the top holder, unlock the red lever and slide the top holder so the strap will sit just below the curved portion of the oxygen cylinder (typically green). Lock the lever. For taller cylinders, position the strap at the uppermost position on the GO2. See Figure 2.



Figure 2. Lock Lever.

Figure 3. Velcro Strap.

FOR VELCRO® STRAPS

1. To secure each cylinder, route a Velcro strap around the cylinder and through the open hook, then pull back tightly and secure the strap to the Velcro. See Figure 3.
2. Repeat for remaining Velcro straps.
3. Make sure each cylinder is secured. See Figure 5. You are ready to GO2 your destination!

FOR BUCKLE STRAPS

1. To secure each cylinder, place the loop of a buckle strap onto an open hook, with the buckle facing out. Route the strap around the cylinder, through the single slot, then back around and through the three buckle slots as shown. Pull the strap tight and close the buckle to secure the cylinder. See Figures 4 and 6.
2. Repeat for remaining buckle straps.
3. Make sure each cylinder is secured. See Figure 5. You are ready to GO2 your destination!



Figure 4. Buckle strap.

Figure 5. Two cylinders secured.

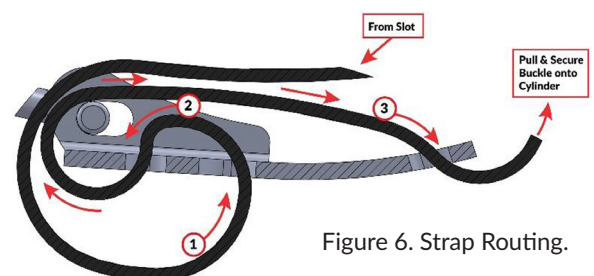


Figure 6. Strap Routing.

STRAP REPLACEMENT INSTRUCTIONS

PURPOSE

This procedure describes how to remove the existing Velcro® straps and install new buckle straps, P/N Q030013, for use in the Sure-Lok GO2 Oxygen Cylinder Holder, FE201207, and the GO2 Twin Oxygen Cylinder Holder, FE201207-2.

REMOVE THE EXISTING VELCRO STRAPS

1. If an oxygen cylinder is present, release the Velcro straps and remove the cylinder. If using twin cylinders, remove both. Move the cylinder(s) away from the GO2 holder.
2. With a sharp knife or scissors, carefully cut the Velcro straps along the slots and remove. Discard the straps.

INSTALL THE BUCKLE STRAPS AND SECURE EACH CYLINDER

1. Position the oxygen cylinder onto the GO2 bottom holder. If using twin cylinders, position both.
2. If necessary, adjust the height of the top holder. Unlock the red lever and slide the top holder so the strap will sit just below the curved portion of the oxygen cylinder (typically green). Lock the lever. For taller cylinders, position the strap at the uppermost position on the GO2. See Figure 1.



Figure 1. Lock Lever.

FOR BUCKLE STRAPS

1. To secure each cylinder, place the loop of a buckle strap onto an open hook, with the buckle facing out. Route the strap around the cylinder, through the single slot, then back around and through the three buckle slots as shown. Pull the strap tight and close the buckle to secure the cylinder. See Figures 4 and 6.
2. Repeat for remaining buckle straps.
3. Make sure each cylinder is secured. See Figure 5. You are ready to GO2 your destination!

Safety Information

Keep these instructions and safety information in the vehicle at all times and refer to them regarding proper GO2 Oxygen Holder operation. Install in an upright position, into existing L Track or pocket in the vehicle floor. Ensure the GO2 does not obstruct aisles or access to exits. Any deviation from Sure-Lok's recommendations regarding configuration, installation and operation shall be the responsibility of the installer.

Only trained professionals should transport oxygen. Be sure to follow the manufacturer's recommendations and follow their safety warnings.

The user should be completely familiar with the use of the GO2 Oxygen Holder. GO2 accommodates O2 cylinders from size M2 to E as well as AZ to D. Inspect the GO2 prior to each use.

Sure-Lok does not recommend making alterations of, or substitutions to, any parts or components of the GO2.

The vehicle floor where the GO2 anchorages are attached shall have equal or greater strength than the system being installed.

Any GO2 units which are suspected to have been in use during an impact from which the vehicle must be towed should be replaced.

Environmental conditions such as dirt, mud, oil, sand, solvents, grease, saltwater or excessive sunlight, will reduce the service life and proper functioning of the system. Prevent contamination of webbing from chemicals, especially battery acid. Strap and belt webbing may be cleaned with mild soap and water. Rinse fully and dry completely.

Ensure that the specific application is in compliance with local, state and federal regulations.

Note: Refer to the U.S. Department of Transportation Pipeline and Hazardous Materials Safety Administration **"Guidance for the Safe Transportation of Medical Oxygen for Personal Use on Buses and Trains"** for additional information regarding precautions to assure that medical oxygen being transported for passengers' personal use is handled and transported safely.

This information is not all inclusive and will not cover or represent every installation.

For further information contact

Sure-Lok International
400 S. Greenwood Ave. Suite 302
Easton, PA 18045

Phone: 610-814-0300
Fax: 610-814-0644

Email: orders@sure-lok.com
www.sure-lok.com/GO2

Q'STRAIT United Kingdom
72-76 John Wilson Business Park
Whitstable, Kent, CT5 3QT

Phone: +44 (0)1227 773035
Fax: +44 (0)1227 770035

Email: info@qstraint.co.uk
www.qstraint.com

